

Product User Guide

Dynamic Furniture Component Care & Maintenance Guide

Basic Care

- Do not stand on this product or use this product as a step ladder.
- Check all bolts, screws, and knobs at least every 4 months to ensure they are fully tight and firmly secure.
- If any bolts, screws, or knobs are missing or damaged; stop use of the product immediately until this has been repaired using factory-authorised parts.
- If any part of the product is missing or damaged, stop use of the product immediately until this has been repaired using factory authorised parts.
- Failure to follow the above warnings could result in serious injury.

Wooden – MFC Components

- Clean regularly by dusting and by wiping with a clean, damp cloth without polish.
- Ensure spots and stains are cleaned as quickly as possible with a clean towel or cloth and blot gently.
- Do not use polish as this promotes 'ring marking'.
- Do not use abrasive cleaners as this may abrade the surface.

Chrome and Metal Components

- Chromium-plated areas can be cleaned with a cloth using methylated spirits. Use with caution and always use the cleaning materials in a ventilated area.
- Lacquered metal can be cleaned with a damp cloth and a mild soap or detergent. The lacquered metal will need to be dried with a different dry cloth.
- Painted aluminium can be cleaned with a soft damp cloth and a mild detergent followed by a clean damp cloth, ensuring that the metalwork is dry afterward by using a different dry cloth.
- Never use silicon or wax polishes that leave a surface residue.
- Never use abrasive powders or scouring pads to clean stubborn marks as this will scratch the components.

Powder Coated Components

- Carefully remove any loose surface deposits with a wet sponge.
- Use a soft brush and warm water to remove dust and other deposits.
- Thoroughly rinse the surfaces with clean fresh water after cleaning to remove all residue.
- Do not use abrasive cleaners as this may damage the surface.

Glass

- Clean regularly by using a damp towel.
- Use an appropriate glass cleaner if necessary.
- Do not use abrasive materials as this will damage the surface.
- Do not place anything on the glass that has rough and sharp edges as they may damage the glass.
- Always use coasters or table mats to protect the surface.

Always test cleaners on a small inconspicuous area first.

Product User Guide

Dynamic Furniture Component Care & Maintenance Guide

High Gloss Components

Daily Care:

You can wipe over the high-gloss furniture with a feather duster to remove any dust that might accumulate throughout the day. To remove finger marks or sticky patches, you should use the microfiber cloth with a touch of soapy water and 'buff' away the fingermarks and patches. Ensure that you don't apply too much pressure when cleaning the surfaces as they can easily be damaged.

If you spill any food or drink on your High Gloss Furniture, it is recommended that you wipe it away immediately. This is because the Lacquer Paint could become stained by the spilled substance. But if this isn't possible, use a microfiber cloth with some soapy water and it should easily wipe right off. After you have cleaned your High Gloss Furniture you can use a dry microfiber cloth to buff away the water to create a beautiful shine.

Don't:

- Do not use chemical cleaners.
- Do not leave any food or drink spillages.
- Do not apply pressure whilst cleaning and wiping.

Always test any cleaners or cloths on a small inconspicuous area first.